

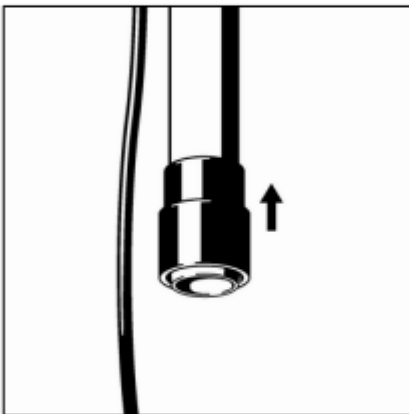
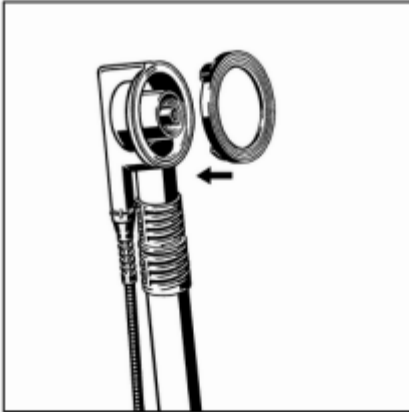
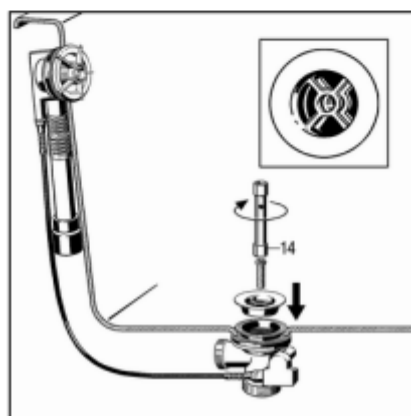


Bath Overflow Waste Installation Instructions




MOUNTING OVERFLOW

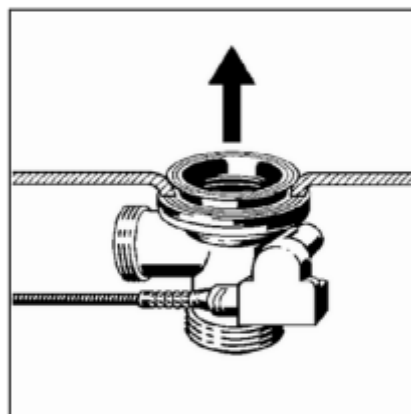


MOUNTING THE DRAIN

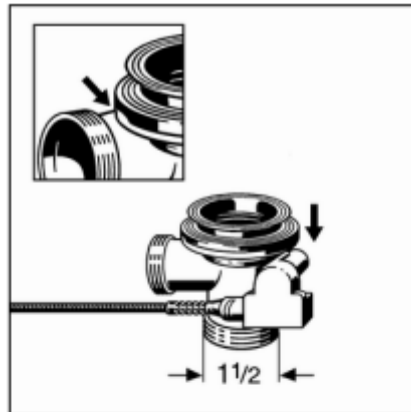


CONNECTING OVERFLOW + DRAIN

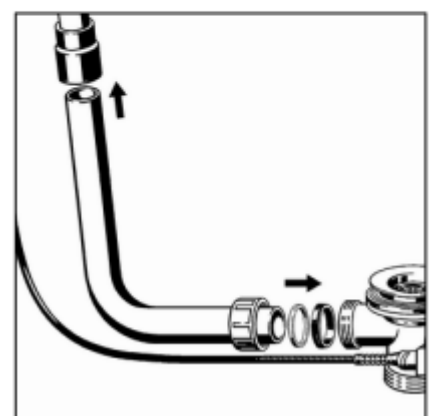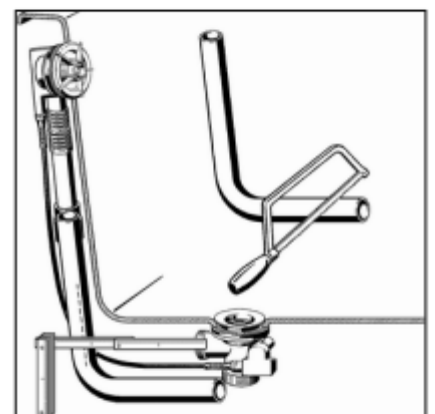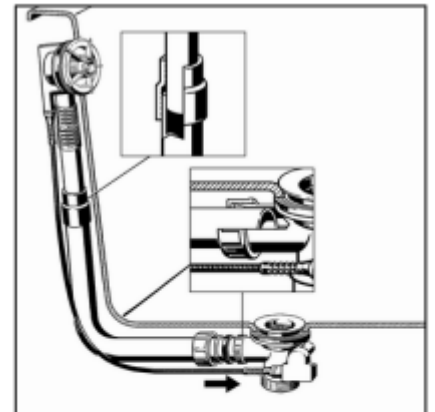



MOUNTING OVERFLOW

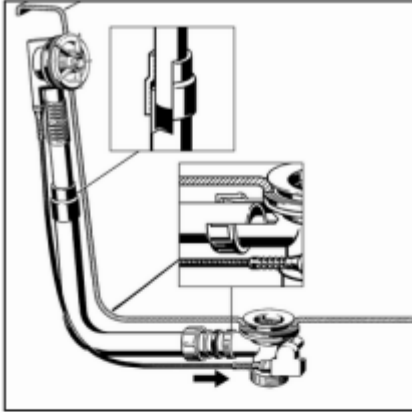


CONNECTING THE WASTEWATER SYSTEM

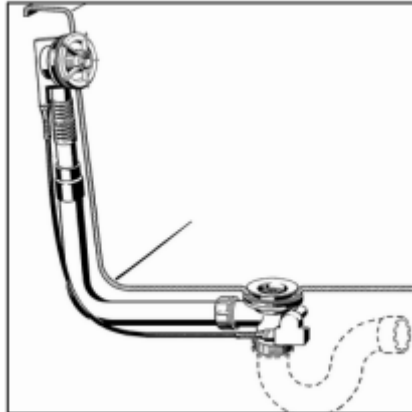

LEAKAGE TEST

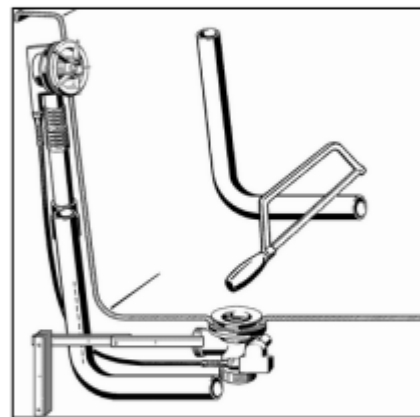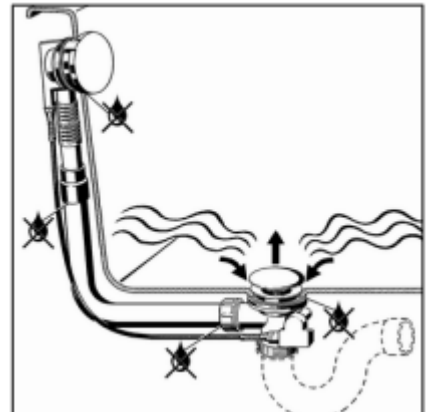

MOUNTING EQUIPMENT SET

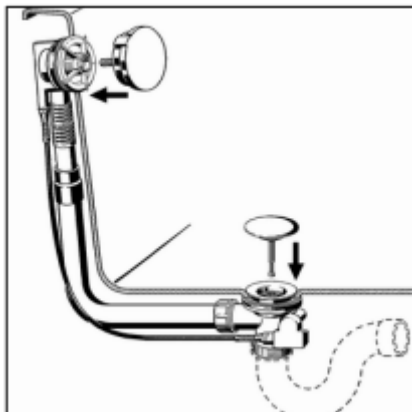

CONTROL

